

PASTE-WELL CORPORATION



WALLCOVERING PASTING MACHINES SINCE 1966

18808-142nd Ave. N.E., Suite 4A
Woodinville, Washington 98072
(425) 485-7682 • Fax (425) 485-6791

SPEED-WELL C-30 PASTING TABLE ASSEMBLY INSTRUCTIONS

The Speed-Well pasting table is designed to be used with the Paste-Well pasting machine and accessory Inch-Well measuring counter. It is the fastest one man mobile pasting method available. In less than 15 seconds, the entire set up can be narrowed to pull through a 30" doorway, down the hall, and even into an elevator, without disturbing the pasting set up.

Important Note

Before setting up the table, remove the following from beneath the table chassis:
(1) 5/16" material rod • (2) shelf support legs • (1) Klunk-Well Alarm tube
(1) roll bar w/ packet of bolts and washers

Setting Up

1. Unfold the wooden table legs to an upright position and secure them by placing the 5/16" material rod in the slots at the back of the legs.
2. Slide the set of table panels out of the chassis bottom. Remove the two wing nuts & washers, then hinge the small top panel upward to remove the leg support panel (6 3/4" x 30" x 1/2"). Save all bolts and washers for step 5.
3. Attach the leg support panel to the front of the table legs with the four wing bolts and washers provided. Do not tighten fully until a later step.
4. Locate the four flathead phillips machine screws on the top of the legs. Remove and use to attach the drop leaf table panel (unpacked in step 2) so that the four holes line up and the longer panel hangs down between the legs. Now tighten wing bolts from step 3.
5. The table is now ready for the attachment of the Paste-Well machine. Place it on top of the legs, behind the table top so that the rear holes line up with those provided on the bottom of the machine chassis. Secure the Paste-Well to the Speed-Well using the 1 1/2" bolts, washers and wing nuts saved in step 2.
(Machines sold prior to 4/98 will require you to drill 2 extra holes in the Paste-Well. See attached template)
6. The roll bar may now be attached to the Paste-Well machine. (Please find instructions supplied with the roll bar.)
7. Raise the drop leaf shelf and support with the two metal 36" legs. Place leg in the round hole in the chassis bottom first, and then slide the top of the leg into the slot on the underside of the table top. supplied

Ready for Use

1. Remove the material rod at the back of the table legs and slide through wallcovering material. Place roll back on the table so that material will feed through the machine face down. See Paste-Well instructions.
2. Position your Klunk-Well Alarm to ride on the top of the material bolt so that it will fall to the floor if you encounter the nasty split bolt scenario.

Caution

It is important to caution your operators to **always** use the pull handle to move the table when fully loaded with paste and vinyl rolls. Undue stress to and/or failure of the table and leg joints may otherwise occur.

Never stand upon the drop leaf of the Speed-Well table as it is not designed for use as a scaffold and bodily harm may occur.

Additional Information

To protect your table top from damage, we suggest that a zinc or linoleum strip be placed underneath the cutting bar (straight edge supplied with the Paste-Well).

Although your Speed-Well Pasting Table may feel unfinished, it has been sealed with a urethane and wax coating. To add to the life of your table, you may want to occasionally recoat it. Although the finish will accept any type of sealer, we suggest clear paste wax.

